



# Sticklers™ Cassette CleanClicker™ and Cassette CleanClicker™ MT Ferrule End-Face Cleaner

## Product Features

- Cassette CleanClicker™ Cleans SC and LC duplex, ST, FC, E2000, and female (no guide pins) MPO cable assemblies
- Cassette CleanClicker™ MT cleans male (with guide pins) MT ferrules
- Micro-woven cleaning ribbon provides high absorbency while trapping dust particles
- Lint-free cleaning ribbon
- Manual advance cleaning wheel enables operator to get more cleaning than traditional shutter and trigger-style cassette cleaners
- Disposable cassette cleaner with main body made from anti-static materials
- Compact size for easy handling

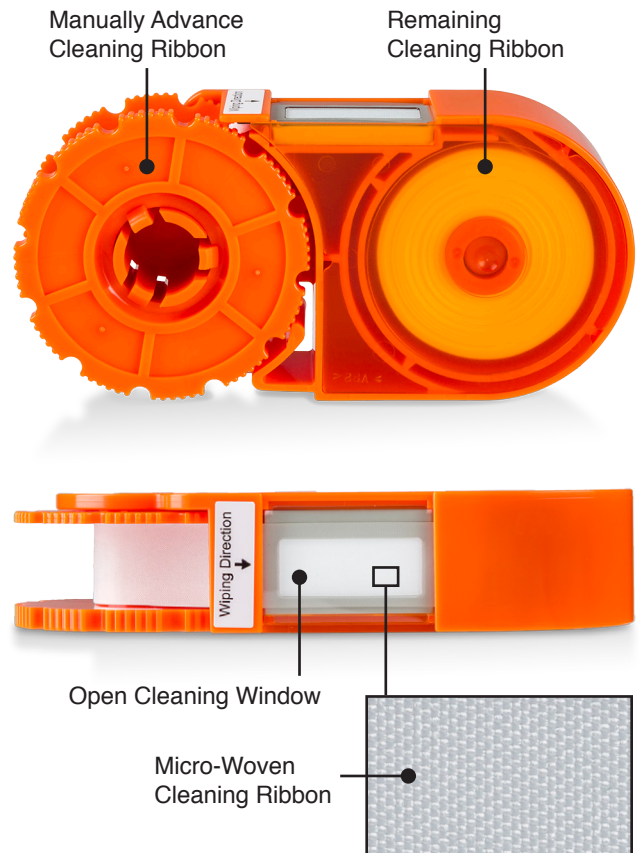

Typical Cleaning Applications
Carrier Networks
Enterprise Networks
Cable Assembly Production
R&D and Test Labs
Network Installation Kits

Packaging	
Part Number	Cassette CleanClicker™ MCC-CCWRC
Part Number	Cassette CleanClicker™ MT MCC-CCWMT
Package Dimensions	4.5" L x .98" W x 2.17" H 115 mm L x 25 mm W x 55 mm H
Case Dimensions	7.5" L x 5" W x 5" H 190 mm L x 127 mm W x 127 mm H
Case Quantity	10 Cassettes/Case
GHS/HCS Pictogram	Not Classified
Recycle Symbol*	

\*Per: 94/62/EC and 97/129/EC



# Sticklers™ Cassette CleanClicker™ Conforms to the Following Fiber Optic Industry Standards:

Industry Standards	Section	Description
ANSI/TIA 455-240 2009		Fiber Optic Connector End-Face Cleaning Evaluation
ANSI/TIA 568.3D-2016	E.3.5	Connector End-Face Cleaning
ARINC 805-4		Fiber Optic Test Procedures
ARINC 806-5		Fiber Optic Installation & Maintenance
AT&T ATT-TP-76461		Inspecting & Cleaning End-Faces
Cisco Systems Doc: 51837		Inspecting & Cleaning Procedures for Fiber Connectors
IBM SY27-2597-15		Cleaning End-Faces for Maintaining Fiber Links
IEC 61300-3-35	5.3	End-Face Cleaning
IEC 61627-1	9.3	Procedure Cleaning w/ Reel Type Cleaners
IEC 62627-1	7.2	Acceptable Reel Type Cleaners
IPC 8497-1	7.3.2	Dry Wipes and Cassette End-Face Cleaning
IPC 8497-1	10	Minimizing Electrostatic Charge Effect
NASA-STD 8739.5A	8	Cleaning Workmanship Standards
SAE AIR6031		End-Face Cleaning
SAE ARP 6283	8.4	Approved Cleaning Equipment
SAE ARP 6283	9.1.1	Wet-Dry Cassette Cleaning
Telcordia GR2923 CORE Issue 2		End-Face Cleaning
Verizon VZ.TRP.9461	5.0	End-Face Cleaning

*When you need perfectly clean splices & connectors™*

[www.SticklersCleaners.com](http://www.SticklersCleaners.com)



**MicroCare Corporation**

595 John Downey Drive  
 New Britain, CT 06051 USA  
 CAGE: OATV9  
 Tel: +1 860 827 0626  
 Toll Free: 1 800 638 0125  
 Email: [TechSupport@MicroCare.com](mailto:TechSupport@MicroCare.com)  
[www.MicroCare.com](http://www.MicroCare.com)

**MicroCare Europe Bvba**

Vekestraat 29 B11  
 Industriezone 't Sas  
 1910 Kampenhout, Belgium  
 Tel: +32 2 251 95 05  
 Fax: +32 2 400 96 39  
 Email: [EuroSales@MicroCare.com](mailto:EuroSales@MicroCare.com)

**MicroCare Asia Pte Ltd**

102E Pasir Panjang Road  
 #03-01 CitiLink Warehouse Complex  
 Singapore 118529  
 Tel: +65 6271 0182  
 Email: [TechSupport@MicroCare.sg](mailto:TechSupport@MicroCare.sg)